

MERIDIAN 200 USER MANUAL

MERIDIAN 200 USER MANUAL

Boothroyd | Stuart Ltd
13 Clifton Road
Huntingdon
Cams. PE18 7EJ
England

Tel (0) 480 52144
Telex 32577 (MERIDN)
Fax (0) 480 59934

Boothroyd | Stuart Ltd, Copyright (c) 1990

ADDENDUM

The software in your CD player has been updated with the following improvements to its control. These changes are not noted in the current User Manual.

1. The use of the search facilities while in the track display will automatically select the track time display so that you can see how far you are searching. When this key is released the display will revert to the normal track display.
2. The use of the Previous key has been altered to encompass a single-key track-repeat function. When the Previous key is pressed it will select the current track. Any subsequent operations of the Previous key will select previous tracks.

The handset supplied with your CD player has also been updated. The new handset only requires two batteries rather than the previous three. In addition it has some new keys, these are:

INDEX < < > >	to select index points
TIME	to rotate through the time displays
RANDOM	this function is not available.

21 August 1992

1 Introduction

The *Meridian* 200 Compact Disc Player is part of the 200-Series of advanced high fidelity equipment. Used in conjunction with other components in the range, it can offer the music lover much more than just very high quality digital sound.

Because the 200 is such a sophisticated device, you are advised to read through this whole manual before using it for the first time, particularly if you are using it with other 200-Series components, or the *Meridian* D600 Digital Loudspeakers. However, we have given a lot of attention to making the operation of the unit as intuitive as possible, so that those of you who are familiar with high fidelity equipment and who cannot wait to get your 200 working will be able to get immediate results.

In purchasing a *Meridian* 200 Compact Disc Player, you have acquired a refined piece of equipment which will continue to bring you listening pleasure for many years. This manual will enable you to get the most from it.

2 About this manual

A number such as 201 refers to a component in the *Meridian* 200-Series of audio equipment, unless otherwise indicated, e.g. 'the socket marked 200 COMMS'.

Whenever a key name is printed in **bold** typeface, it means that you *should* press this key. When a series of key strokes are required, e.g. press **Next** then press **Previous**, the key names will be separated by a hyphen, i.e. **Next – Previous**. If the key name is not in bold type, it indicates that the course of action is not required at present, e.g. 'if you want to change the display, press Display' means you can do this, but it is not essential as part of the operation currently being discussed.

In some instances, a key and the status of the equipment share the same name, e.g. the Standby key and the *standby* state. For absolute clarity, the key name will always start with a capital letter and the status will always be indicated by the use of italic type.

3 About the 200-Series

The *Meridian* 200-Series of high fidelity equipment is probably the most sophisticated family of hi-fi products available. It has been developed to operate at a variety of levels, from the simplest conventional single-room hi-fi to a whole-house music-management system. The range of components in the 200-Series ensure that a *Meridian* system will satisfy the needs of any user. In addition, the system can be further enhanced by the use of one or more pairs of *Meridian* D600 Digital Loudspeakers.

The 200 Compact Disc Player is a very advanced machine. Its circuitry has been carefully optimised to provide the highest quality of sound available from the Compact Disc medium. In particular, considerable attention has been paid to designing the error-correction circuits in order to ensure maximum fidelity to the original recorded signal and high playability.

Despite its high performance, each piece of equipment in the 200-Series has been planned for ease of use, with microprocessor control being applied throughout the range to simplify operation. We have also paid great attention to the appearance of the units, and much care has been taken in the selection of the materials used in the construction of the components to ensure that your *Meridian* 200-Series equipment will look and sound as good in the years to come as it does now.

4 Unpacking the 200

On opening the carton, you should have found the following parts:

- *Meridian* 200 Compact Disc Player
- Remote Control unit
- 3 AAA batteries for Remote Control unit
- Power cord
- Network lead, labelled 'E'
- This manual

If any of these items are missing, please contact your dealer. We suggest that you retain the packing carefully as it provides maximum protection for the unit in transit.

5 Accessories

The following accessories are available from your dealer:

- Power cord (Europe)
- Power cord (USA & Canada)

In case of difficulty, they can also be ordered directly from Boothroyd|Stuart whose address is on the title page of this manual.

One other accessory may be of interest to you. The 209 Remote Control offers some additional facilities over those available from the smaller handset supplied with the 200, but is only of significant benefit if you will be using the 200 as part of a *Meridian* 200-Series installation. The 209 is also available from your *Meridian* dealer.

6 Installing your 200

6.1 General precautions

Before carrying out any installation, you should first ensure that the 200 is marked with the correct voltage for your local AC supply. If this is not the case, do not proceed with these instructions, but contact your dealer.

As a general rule, you should not make any connections to the 200, or to any other component in your system, whilst the AC power supply is connected and switched on.

6.2 Transit collar

The 200 is fitted with a locking device to secure and protect the laser mechanism whilst the unit is in transit. Before using the 200 for the first time you must remove the collar. To do this:

- Carefully lift the 200 up. On the underside of the drawer mechanism, you will see a plastic collar held in place by a screw.
- Remove this screw and the collar, keeping the 200 upright.
- Put the 200 down. Gently open the drawer by hand and then return it to the closed position.

NOTE It is essential that you perform this operation before connecting the 200 to the AC power for the first time.

You should store the screw and collar in a safe place and always refit it, by reversing the above procedure, before transporting the 200.

6.3 Connections

The *Meridian* 200 is a CD transport and as such has no analogue outputs. It must be connected to either a digital to analogue converter such as the *Meridian* 203 or *Meridian* D600 Digital Audio Loudspeakers. Connection to your converter can be made using either an optical or electrical link but optical is recommended.

The connections you make will depend on other components in your system.

6.4 If you are using 203 D/A converter

- Connection to a 203 can be made using either an optical or electrical link. This is not externally switchable but the optical input is given internal priority.

6.5 If you are using D600 Loudspeakers

- Connect the digital output from the rear of the 200 to the M-lead supplied with the D600s. Follow the instructions in the D600 manual, treating 200 as a 207. The D600s are fully-programmable and you should consult your manual before deciding which input to use. If you have any doubts, your dealer will be able to assist you.

Wherever possible, we would advise that you use optical interconnections for the digital signal as these result in superior audio performance. Additionally, optical digital cables do not generate any radio-frequency interference, nor are they susceptible to such interference.

Suitable cables are available from your *Meridian* dealer.

DO NOT, under any circumstances, connect anything other than *Meridian* leads to the socket marked 200 COMMS on the rear of the 200.

7 Siting

The 200 should not be placed on top of a power amplifier, but it can be stacked on the 201 Preamplifier and the 204 Tuner, if you have these items in your system.

You should avoid sites where it would be subjected to direct sunlight or where it is near a heat source, e.g. a central heating radiator, or where the equipment could be subjected to strong magnetic radiation, e.g. very close to a television, or where connecting cables may be subject to, or cause, interference.

In common with all Compact Disc players, the 200 emits some radio-frequency signals. For this reason, try to keep all mains cables and network leads away from signal cables, which includes audio, antenna and loudspeaker cables. Some time spent laying out the cables carefully will repay you with the best possible performance later.

8 Setting up the 200

8.1 Checking

Before turning on the power, check once again that you have made all the connections correctly and that you have not disturbed any existing connections in the process.

8.2 Switching on

- turn on the power switch at the rear of the unit
- The Standby key and a small point on the display should now be illuminated. [.]

8.3 If there are no lights

Check the integrity of your power connections, including any fuses in your supply. If the Standby key is still not illuminated and the rest of your system is functioning, contact your dealer for help.

8.4 Standby

The entire 200-Series is designed to be left connected to AC power at all times.

This *standby* state ensures that the components operate at maximum efficiency from the moment you start listening. It is perfectly safe and consumes a negligible amount of power. However, when you are not going to use your system for an extended period of time, e.g. when you are going on holiday, we would advise you to disconnect it from the AC power supply.

An additional benefit is that the Continue key will allow you to continue listening to a disc from the exact point at which you left off if you use the Standby key to shut your system down, and do not switch off the AC power.

8.5 Before using the Remote Control

- Fit the batteries provided.

To do this:

- Slide the cover on the underside of the unit in the direction indicated and remove it.
- Push the batteries into the unit, observing the polarity marked on the holder.

FAILURE TO OBSERVE CORRECT POLARITY WILL DAMAGE THE UNIT.

- Replace the cover.

When renewing the batteries, you are advised to use only high-quality leak-proof batteries from a reputable manufacturer.

If you are not going to use the Remote Control unit for an extended period of time, you should remove the batteries from it.

9 Basic operation of 200

Before discussing the operation of playing a Compact Disc, there are three keys on the front panel of the 200 which need to be explained.

9.1 Display

Pressing this key will cycle the display on the 200 through its four states:

- Track (Index) number
- Elapsed time for the current track
- Elapsed time for the entire disc
- Remaining time for entire disc

The track number display will generally consist of one or two digits, for example, [11].

However, when a disc contains index points in addition to the tracks, the display will change to show the current index number, e.g. a display which reads [11.3] would indicate that track 11, index 3 was currently being played. You should note that the 200 will not display the first index point, e.g. you will not normally see the display [11.1] but when the second index point is reached, the display will change, e.g. [11.2].

When a disc has ended, the display will show the total number of tracks if the track display is selected, or the total playing time if any of the time displays are selected.

9.2 Open Close

This key opens the disc drawer if it is *closed*, or closes it if it is *open*.

9.3 Standby

When you press this key, you will shut down the 200. If a disc is playing at the time, it will stop, and if the 200 is connected to other components of a *Meridian* 200-Series installation, it will also cause the other components to revert to *standby* state.

This method of shutting the 200 down is perfectly safe, and the disc will not be damaged by leaving it in the player.

To remove the disc before shutting down the system:

- Press **Open**. This will stop the disc and open the drawer
- Remove the disc
- Press **Standby**, this will close the drawer and shut the system down.

Because the 200 is controlled by a micro-processor, using this 'shorthand' approach is perfectly safe, as the player will interpret the 'open' command as 'stop the disc then open the drawer', and it will interpret the 'standby' command as 'close the drawer then go into *standby*'.

9.4 To load and play a disc

- press **Open**

This will turn on the 200 and open the drawer. If the 200 is part of a *Meridian* 200-Series installation, it will also bring the entire system out of *standby*. If you are not using other *Meridian* equipment, you will need to switch on the rest of your system manually.

- Insert the disc in the drawer, label side up, ensuring that the disc is properly seated on the player's hub.
- Press **Play**

The drawer will close, the 200 will read the catalogue information (directory) stored on the disc, displaying the message [dir.], and it will then play the disc.

9.5 To load disc at a particular track

- Press **Open**
- Insert the disc as above
- press **Previous** or **Next** until the required track number is displayed. During this operation, the display changes to show 'S.', for select, followed by the track number, e.g. [S. 21]
- press **Play** or wait for a short time for the 200 to start automatically

The disc will commence playing at the track number you have selected and will continue to play until the end.

9.6 To move to a different track

- press **Previous** or **Next** until the required track number is displayed, then
- press **Play** or wait for a short time

9.7 To move to the next track

- press **Play**

9.8 To restart the current track

- press **Previous** — **Next** — **Play** or wait for a short time

9.9 To pause the disc

- press **Pause**

The Pause key will illuminate and, if a time display is selected, it will freeze.

When you want to continue playing the disc again

- press **Pause** a second time.

9.10 To stop the music

- press **Stop**

When you are ready, you can resume playing the disc from the exact point at which you stopped it by:

- pressing **Continue**.

This will work, even if you have placed the system in *standby* in the interim, as the 200 retains the location of the point on the disc at which Stop was pressed. Note that if you turn off the power or press Open, the data necessary for this to work will be lost.

9.11 To play a disc from standby

A disc should be already loaded. If you wish to play it from the start

- press **Play**

If you wish to play it from the point at which it was stopped

- press **Continue**

9.12 To scan through a disc

- press << or >> until you reach the point you are seeking.

Note that, as the 200 mutes audio output during this operation, it helps you assess the position in the track to select one of the time displays first.

9.13 To continuously repeat a disc

- press **Repeat**

The Repeat key will illuminate and the disc will re-start after each playing until you press Standby, Stop or Open. You can also cancel this operation by pressing Repeat a second time.

10 Using the remote control

Most of the functions of the *Meridian 200* are available with the supplied Remote Control unit.

Obviously it will first be necessary to load a disc, then the Remote Control unit can be used as follows.

10.1 To play a disc

- press **Play**

The 200 will read the catalogue information stored on the disc and then begin to play the disc.

10.2 To play a particular track

either

- press **Previous** or **Next** until the correct track number is displayed
- press **Play** or wait for a short time

or

- press one or more of the **Number Keys** until the correct track number is displayed. (See 9.5).

- press **Play** or wait for a short time

The disc will commence playing at the track number you have selected and will play until the end.

10.3 To move to a different track

either

- press **Previous** or **Next** until the required track number is displayed
- press **Play** or wait for a short time

or

- press one or more of the **Number Keys** until the required track number is displayed.
- press **Play** or wait for a short time

10.4 To move to the next track

- press **Play**

10.5 To replay the current track

either

- press the required **Number Key(s)** — **Play** or wait for a short time

or

- press **Previous** — **Next** — **Play** or wait for a short time

10.6 To pause the disc

- press **Pause**

The Pause key will illuminate. When you want to continue playing the disc again

- press **Pause** a second time.

10.7 To stop the music

- press **Stop**

10.8 To scan through a disc

- press << or >> until you reach the point you are seeking.

Remember it helps you to assess the position in the track to select one of the time displays first.

11 Using a 209 Remote Control

If you have a 209 as part of your 200-Series installation, it can be used in place of the unit supplied with the 200.

In general, operation of the 209 is identical to the descriptions given above, but the **Track** button should be pressed before selecting a track number for the first time. After this first operation, it is not necessary to press Track repeatedly, but doing so ensures correct operation of the 200, and the instructions in this manual will, therefore, usually advise you to press Track. The following additional functions are available.

11.1 To restart the current track

- press **Track – Play** or wait for a short time

11.2 To repeat a disc continuously

- press **Repeat**.

The Repeat key will illuminate and the disc will restart after each playing until you press Stop, or Repeat a second time.

12 More advanced operation

As already mentioned, the *Meridian* 200 can access index points where these are provided on a disc.

12.1 To move to a particular index point

- press **Previous** or **Next** until the required track number is displayed, the display will change to show 'S.' (for select), followed by the track number, e.g. [S. 3].
- press **Previous Index** or **Next Index** until the required index number is displayed, the display will now show the track and index number, separated by a small point, e.g. [S. 3.2].
- press **Play** or wait for a short time

12.2 Programming

The 200 allows you to select your own program of music from any disc. You can play the tracks in any order you like, and can repeat one or more tracks several times in your personal program.

Please note that you cannot sequence more than 25 tracks. If you try to enter additional tracks, you will observe that the display continues to show [C. xx], where 'xx' is the number of the track that you have just tried to program.

The 'C' stands for cancel, once you have programmed a track, the display will change to 'P'. Any tracks marked 'C' will not play.

To enter a program:

- select the first track required by pressing **Previous** or **Next** until the correct number is displayed
- press **Store**

Repeat this operation for all the tracks you wish to include in your program, then

- press **Play**

If you press **Stop** twice, you will cancel any program you have entered, and the display will momentarily change to [C.P.]. Opening the draw will also cancel any programming

You can review your program while the disc is playing by pressing **Previous** or **Next**. Tracks that will not play will display a 'C' prefix to the track number.

It is not possible to program index points, the 200 will only allow you to create a program of selected tracks.

Note, it is possible to program the 200 while the disc is playing.

12.3 Cancel programming

The 200 offers an extra facility to make life a little easier for you. In many instances, you will wish to play the majority of the tracks on a disc, skipping, perhaps, only one or two.

Of course, you can program the entire disc with the exception of the tracks you do not want, but there is a faster method:

- select the first track not desired by pressing **Previous** or **Next** until the correct number is displayed
- press **Cancel**

Repeat this operation for all the tracks you wish to exclude from your program, then

- press **Play**

If you exclude tracks in this way, you will only be able to play the disc in normal, numerical, order.

12.4 Pause play

The Pause key can be used to 'action' a selection from *stop*. To start a disc up *paused* at the beginning of a track:

- press **Previous** or **Next** until the required track number is displayed
- press **Pause**

Then to hear the music with instant access:

- press **Pause**

13 Advanced remote operation

Index points cannot be accessed using the Remote Control unit supplied with the 200. However, if you have a 209 Remote Control unit you can access index points where these are provided on a disc.

13.1 To move to a particular index point

either

- press **Previous** or **Next** until the required track number is displayed
- press * then **Previous** or **Next** until the required index number is displayed
- press **Play** or wait for a short time

or

- press **Track — Number Key(s)** to select the track
- press * — **Number Key(s)** to select the index point
- press **Play** or wait for a short time

13.2 To enter a program

either

- select the first track required by pressing **Previous** or **Next** until the correct number is displayed
- press **Store** if using a 209 or **Progr** if using the Remote Control unit supplied with the 200.

Repeat this operation for all the tracks you wish to include in your program, then

- press **Play**

or

- select the first track required by pressing a **Number Key** (or keys) until the correct number is displayed. (Remember that you may need to press **Track** first if using the 209).
- press **Store** if using a 209 or **Progr** on the Remote Control unit supplied with the 200.

Repeat this operation for all the tracks you wish to include in your program, then

- press **Play**

If you press **Stop** twice, or **Open**, you will cancel any program you have entered.

13.3 Programming cancelled tracks

You cannot program cancelled tracks, as described at 12.3, using the Remote Control unit supplied with the 200. However, if you have a *Meridian 209*, this facility is available to you. *Either*:

- select the first track not required by pressing **Previous** or **Next** until the correct number is displayed
- press **Cancel**

Repeat this operation for all the tracks you wish to exclude from your program, then

- press **Play**

or

- select the first track not required by pressing **Track — Number Key(s)** until the correct number is displayed
- press **Cancel**

Repeat this operation for all the tracks you wish to exclude in your program, then

- press **Play**

If you exclude tracks in this way, you will only be able to play the disc in normal, numerical, order.

14 Cleaning

The main body of the 200 is epoxy-enamelled aluminium. To clean the case, use a cloth barely moistened with a solution of mild detergent and water.

Disconnect the power cord before cleaning the unit. Ensure that no water is allowed to get inside the case and do not re-connect the power until you are certain that the 200 is completely dry.

The display panel is glass, the key pad is plastic. Use a barely damp chamois leather on these areas.

Do not use abrasive cleaners on any part of the 200.

The electrical digital output on the rear of the 200 is gold-plated and needs no cleaning if gold-plated phono plugs are used. Otherwise, we recommend that you remove and replace the plug at least once a year. A proprietary contact cleaner can be used to some advantage.

15 Operation summary

On the 200 front panel

- Open** Open or close the disc drawer.
- Close** If the player is in *standby* state, this key will also bring the player, and any connected *Meridian 200-Series* products, out of *standby*.
- Play** Play a disc, a selected track, or move to the next track.
- Stop** Stop the disc currently being played. If pressed a second time, clear any stored program from memory, the display will show [C.P.].
- Pause** Temporarily stop the disc being played, or, if the disc is already paused, continue playing it.
- Store** Store the currently selected track number in memory as a track to be played.
- Next** Select the next track number. If this key is held down it will rapidly cycle through the available tracks.
- Next Index** Select the next index point. Please note that the 200 cannot know how many, if any, index points are provided until it encounters them during playing. It is, therefore, possible to select an index point which does not exist. If this should happen, the 200 will play the selected track from the beginning. This is a feature of the Compact Disc specification and not a limitation of the *Meridian 200*.
- >> Fast scan the disc forwards.
- Standby** Place the 200 and any *Meridian 200-Series* products to which it is connected into *standby* state. If the 200 drawer is *open* and the system is not in *standby* state, pressing this key will first close the drawer, then put the system in *standby* state.
- Display** Cycle the display through:
- track number
- track elapsed time
- disc elapsed time
- disc remaining time
- Repeat** Continuously repeat the currently playing disc until Stop, Open or Standby is pressed. Pressing Repeat a second time will also cancel the operation.
- Continue** Re-commence playing the current disc from the point at which Stop was pressed. This key will also release the *pause* state.
- Cancel** Store the currently selected track number in memory as a track to be skipped.
- Previous** Select the previous track number. If this key is held down it will rapidly cycle through the available tracks.

Previous Index Select the previous index point. Please remember that the 200 does not know how many, if any, index points are provided until it encounters them during playing.

<< Fast scan the disc backwards.

On the Remote Control supplied

Play Play a disc, a selected track, or move to the next track.

Stop/CM Stop the disc currently being played and, if pressed a second time, clear any stored program from memory.

Pause Temporarily stop the disc, or, if the disc is already *paused*, continue playing it.

Progr Store the currently displayed track number in memory as a track to be played.

Next Select the next track number. If this key is held down it will rapidly cycle through the available tracks.

>> Fast scan the disc forwards.

Repeat Continuously repeat the currently playing disc until Stop/CM is pressed.

Previous Select the previous track number. If this key is held down it will rapidly cycle through the available tracks.

<< Fast scan the disc backwards.

Number keys Select track numbers. Please note that if you select a track number higher than the maximum available on the current disc, the 200 will either ignore your selection if the disc is already playing, or display an error message if you are trying to start playing a disc at that track number.

On the 209 Remote Control

Cancel Store the currently selected track number in memory as a track to be skipped.

* When followed by a **Number Key**, or by **Next** or **Previous** allow the selection of index points on a disc.

Display Cycle the display through:
- track number
- track elapsed time
- disc elapsed time
- disc remaining time

Track Replay the current track from the beginning.

When followed by a **Number Key(s)** move to the selected track.

16 The Compact Disc medium...

The introduction of the Compact Disc was a major revolution in the reproduction of music. Until then, all musical reproduction had used analogue methods.

The problem was, that at each analogue stage in the process of capturing and reproducing the sound, distortion was introduced and information was taken away, so that, by the time the final sounds reached your ears, they were some way removed from the original. Not only that, but the storage media that were available like vinyl or magnetic tape, were prone to physical wear and so, every time you played a disc or tape, the fidelity of the reproduced sound to the original was further lessened.

Compact Disc tackled the problem in a completely different way. Instead of the older technique, music is recorded using digital technology. Each second of music is divided into 44,100 slices, and each sound-slice is sampled and evaluated to produce a number, which represents the actual sound occurring in that split-second. The advantage of this is that the resultant stream of numbers can be reproduced with absolute fidelity through any number of copying processes, which makes each Compact Disc manufactured a faithful reproduction of the original master tape. For the first time, the fidelity in 'high fidelity' could be achieved!

The Compact Disc medium confers several additional benefits on users.

In analogue recordings the dynamic range of the sound, the difference between the loudest and the quietest passages, could never approach that experienced in real life. This was a limitation of the media used. With a conventional disc, a loud sound meant that the stylus had to move further and faster from side-to-side, and there is a finite limit on the ability of any mechanical device to respond in this way. Louder sounds also meant more rapid wear whenever the disc was played. At the other end of the scale, very quiet sounds tended to become 'lost' in the noise inherent in vinyl. Consequently, most recordings were electronically 'compressed' to make their quiet passages louder and their loud passages quieter, which is why they could never sound like 'the real thing'. Magnetic tape suffered in a similar way.

In addition, both analogue media were heavily dependent on the mechanical quality of their transport mechanisms, the turntable or tape deck. Speed stability was always a problem and often introduced audible variations in pitch, generally referred to as wow and flutter.

By contrast, the Compact Disc medium could be considered very near to perfection. The dynamic range achieved on Compact Disc closely approaches that experienced in real life and only very occasionally does a recording have to be compressed in any way. Unlike tape and LP, a Compact Disc is essentially a quiet medium. For the first time, you will be able to hear the silences in your recordings!

In contrast to tape and LP, the Compact Disc will sound as perfect on its 1000th playing as it did on its first. This is because the playing surface is only ever touched by a beam of light – unless of course you are clumsy when you handle your discs! The laser which 'reads' the digital signal encoded on the discs surface causes no wear whether the music is pianissimo or fortissimo.

The Compact Disc also frees music from the yoke of mechanical imperfections. Frequency stability is ensured by a high-frequency quartz oscillator, the same kind of device that operates watches and clocks.

Yet another benefit accrues from the digital nature of the Compact Disc which allows a disc to be accessed in a random fashion, unlike older media, and this means you can re-arrange the musical programs to suit your preferences, rather than those of the record companies', and can skip any tracks you don't like on a disc.

There is another benefit of the digital medium. When a sound is recorded digitally, it becomes possible to check its accuracy whenever it is replayed, and even to correct any errors that do creep in. Thus, the familiar 'snap, crackle and pop' of analogue recordings becomes a thing of the past in the digital domain.

You may be thinking by now that with such a wonderful medium as the Compact Disc, all CD players must be equally good. It is true that, using an average audio system, any CD player will sound better than an equivalent analogue system. However, there are still significant differences between players that will be revealed by top-grade audio installations.

Meridian were the first company in the field to work successfully on an enthusiast's CD player, and achieved world recognition for the classic MCD player. A professional version of the MCD, the PRO-MCD followed and is still widely used in recording studios today. The 207 followed, and is considered to be one of the finest CD players available in the world at any price. The 200 is part of the continuing evolution and incorporates all of *Meridian's* experience coupled with the very latest technological innovations.

Meridian have also developed the D600, the world's first digital audio loudspeakers, which carry the audio revolution to its natural conclusion. These speakers, used with a *Meridian* CD player, deliver the finest possible sound.

17 Help!

17.1 Standby key not lit

Check the following:

- there is AC power connected to the socket on the rear of the 200
- the power switch on the rear panel of the 200 is turned on

If the 200 will still not illuminate, check any fuses in your power supply and the fuse on the rear panel of the 200. If these are all intact, contact your dealer.

17.2 Drawer will not open

Check that:

- the Standby key is illuminated
- the transit collar has been removed

With the power switched off, try gently opening the drawer by hand. **DO NOT USE FORCE.** If the drawer will not open, or if it still does not work correctly after restoring power to the 200, contact your dealer.

17.3 Will not play a disc

Check that:

- the disc is correctly seated on the hub of the 200 and is label-side up
- your preamplifier has been turned on and the volume raised sufficiently
- the correct audio, or digital in the case of the *Meridian* D600s, connections have been made
- the correct input has been selected on your preamplifier
- the Pause key is not illuminated

If none of the above are at fault, try another disc. If this will not play either, contact your dealer, otherwise examine the offending disc carefully for signs of damage or dirt.

17.4 Radio interference

NOTE 200 is a digital audio and computing device which has been designed to very high standards of electromagnetic compatibility.

FCC WARNING: This equipment generates and can radiate radio frequency energy and if not installed and used correctly in accordance with our instructions may cause interference to radio communications or radio and television reception. It has been type-tested and complies with the limits set out in:

- Subpart J, Part 15 of FCC rules for a Class B computing device.

These limits are intended to provide reasonable protection against such interference in home installations.

If this equipment does cause or suffer from interference to/from radio or television reception then the following measures should be tried:

- Reorient the receiving aerial (or antenna) or route the antenna cable of the receiver as far as possible from the 200 and its cabling.
- Ensure that the receiver uses well screened antenna cable.
- Relocate the receiver with respect to the 200.
- Connect the receiver and this product to different AC outlets.
- If the problem persists contact your dealer.

VDE This product has been designed to comply with VDE 0871/6.78 as a Class B device.

EEC This product has been designed to comply with the limits set out by the CISPR 14 committee of the IEC.

REMEMBER to switch all units off before changing any connections.

18 Maintenance & Service

The *Meridian* 200-Series of hi-fi components have been carefully designed to give years of untroubled service, and there are no user-serviceable parts inside the case, nor do the units require any form of maintenance.

In the unlikely event that your 200 fails to function correctly, it should be returned, in its original packing, to your *Meridian* dealer.

In case of difficulty, please write to:

- In the UK, Boothroyd Stuart Ltd.
13 Clifton Road, Huntingdon,
Cambridgeshire, PE18 7EJ.
- In the USA, Meridian America Inc.
14120-K Sullyfield Circle, Chantilly, VA 22021
Tel (703) 818 3028, Fax (703) 830 7825
- Outside the UK, contact the importing agent for the territory. A list of *Meridian* agents abroad is available from the above addresses.

No responsibility can be accepted for the 200 whilst in transit to the factory or an agent and customers are, therefore, advised to insure the unit.

19 Guarantee

The *Meridian* 200 is guaranteed against defects in material and workmanship for 12 months from the date of purchase.

The guarantee is void if the 200 has been subjected to misuse, accident or negligence, or has been in any way tampered with or modified without the written authorisation of Boothroyd Stuart Ltd.

Note that connecting anything other than the correct Network-Lead to the socket marked 200 COMMS may cause damage to the 200 which will not be covered by this guarantee. Attempted servicing by unauthorised people may invalidate this guarantee.

Labour and carriage charges are not covered unless by local agreement.

When seeking service under guarantee, proof of the date of purchase will be required.

Outside the UK, local warranty liability is restricted to equipment purchased within the territory. Our agents abroad are only under contractual obligation to service under guarantee equipment sold through them. They are entitled to make a non-refundable charge for any service carried out on other equipment.

This guarantee does not limit your statutory rights within the United Kingdom.

20 Specification

Display	Track/Index, Track time elapsed, Disc time elapsed, Disc time remaining
Finish	Black textured enamel and glass
Dimensions	325 mm x 100 mm x 320mm (12.9" x 3.9" x 12.6")
Weight	6.4 kg (14 lbs)

21 Index

- About the 200-Series, 3
- Accessories, 5
- Advanced operation, 12

- Basic operation, 9
- Batteries for Remote control, 8.5

- Cancel programming, 12.3, 13.3
- Cleaning, 14
- Compact Disc medium, 16
- Connections, 6.3
- Continue, 8.4, 9.10
- Continuous repeat, 9.13

- Disc will not play, 17.3
- Display, 9.1
- Drawer, 6.2, 17.2
- D600 Digital Audio Loudspeakers, 3, 6.3, 6.5, 16

- EEC, 17.4

- Fault diagnosis, 17
- FCC, 17.4
- Fitting batteries in remote control, 8.5

- Guarantee, 19

- Help, 17

- Index points, 9.1, 12, 12.1
- Installation, 6

- Load and play a disc, 9.4
- Load and play a track, 9.5

- Maintenance, 18
- Move to a different track, 9.6, 10.3
- Move to the next track, 9.7, 10.4

- Open/Close, 9.2
- Operation, advanced, 12
- Operation, basic, 9
- Operation summary, 15
- Operation with remote control, 10

- Pause play, 12.4
- Pause the disc, 9.9, 10.6
- Play, 9.4, 9.5, 9.11, 10.1, 10.2
- Play a particular track, 9.5, 10.2
- Play from standby, 9.11
- Problems, 17
- Programming, 12.2, 13.2

- Radio interference, 17.4
- Remote control, 8.5, 10
- Repeat a disc, 9.13, 11.2
- Repeat, continuous, 9.13
- Restart a track, 9.8, 10.5, 11.1

- Scan a disc, 9.12, 10.8
- Selection of index points, 12.1, 13.2

- Selection of tracks, 9.5, 10.2
- Service, 18
- Setting up, 8
- Siting, 7
- Specification, 20
- Standby, 8.4, 9.3
- Stop, 9.10, 10.7

- Transit collar, 6.2
- Transporting the 200, 6.2

- Unpacking, 4

- VDE, 17.4

- Warranty, 19

- 203 Digital to Analogue Converter
- 209 Remote Control, 11

