

# Meridian 586 RS232 Interface

The RS232 interface of the 586 can be operated from any terminal which operates at 9600 baud with 1 start bit, 1 stop bit and no parity. Commands take the form of two ASCII characters. A carriage return character will execute the command, and backspace is also implemented. The commands emulate the use of the MSR handset or the 586 handset as follows:

## MSR Emulation Keys

CD	CD	NE	Next
RD	Radio	PR	Previous
LP	LP	FF	Fast Forward
TV	TV	FB	Fast Back
T1	Tape 1	DI	Display
T2	Tape 2	SR	Store
CR	CDR	CL	Clear
CB	Cable	N0	0
DV	DVD or Text	N1	1
V1	VCR 1	N2	2
V2	VCR 2	N3	3
LD	Laser Disc	N4	4
SB	Standby/Off	N5	5
PL	Play	N6	6
ST	Stop	N7	7
OP	Open	N8	8
PS	Pause	N9	9
RP	Repeat	DP	Decimal Point

## DVD Handset Commands

SU	Setup
MN	Menu
MP	Up arrow
MM	Down arrow
ML	Left arrow
MR	Right arrow
EN	Enter
RT	Return
DI	Display