

## Meridian 596 RS-232 commands

Cmd	Action	Cmd	Action
CD	CD source	SL	Slow
RD	Radio source	BA	Band
LP	LP source	AU	Audio stream
TV	TV source	SU	Subtitle on/off
T1	Tape1 source	su	Subtitle select
T2	Tape2 source	OS	OSD select
CR	CDR source	RC	Record
CB	Cable source	AN	Angle
DV	DVD source	rp	Fn-Repeat (same as AB repeat)
V1	VCR1 source	AB	AB repeat
V2	VCR2 source	PH	Phase
LD	LDisc source	TB	T button
VP	Volume plus	CH	Chapter
VM	Volume minus	SE	Setup
MU	Mute	ME	Menu
SB	Standby	RT	Return
MR	Menu right	EN	Enter
ML	Menu left	TI	Title
MP	Menu plus (up)	cl	Fn-Clear
MM	Menu minus (down)	sr	Fn-Store
PL	Play	di	Fn-Display
ST	Stop	mu	Fn-Mute
PS	Pause	mp	Fn-Menu plus (up)
RP	Repeat	mm	Fn-Menu minus (down)
NE	Next	ml	Fn-Menu left
PR	Previous	mr	Fn-Menu right
DI	Display	vp	Fn-Volume plus
SR	Store	vm	Fn-Volume minus
CL	Clear	VN##	Goto volume number ## (2 digits)
DP	Decimal point		
FF	Fast forward		
FB	Fast back		
N0-N9	Digit keys 0-9		
OP	Open		
MO	Mono		

### RS-232 settings:

9600 Baud, 8 data bits, 1 stop bit, no parity, no handshaking  
 Unit echoes characters sent to it

### NOTES:

Commands are case sensitive  
 Commands must be followed by carriage return character  
 The unit replies to volume commands with "VOL nn"  
 The unit replies to Audio select commands with "AUDIO n"  
 The unit does not reply to any other command