

## RC5 output codes for the Meridian MSR+ handset.

The following table shows the RC5 codes generated by the MSR+ when used in it's default setup. All keys in common with the original MSR (apart from Slow) produce the same RC5 output. The system code used in every case is 19.

Key	System code : Command code
CD	19:107
Radio	19:108
Aux	19:114
TV	19:115
Tape	19:109
Sat	19:110
Disc	19:117
Cable	19:111
DVD	19:116
VCR 1	19:112
VCR 2	19:113
Game	19:76

Key	System code : Command code
0	19:0
1	19:1
2	19:2
3	19:3
4	19:4
5	19:5
6	19:6
7	19:7
8	19:8
9	19:9

Top menu	19:121	#	19:67
Menu	19:82	Setup	19:69
Menu up	19:80	Secondary menu up	19:94
Menu down	19:81	Secondary menu down	19:95
Menu left	19:85	Secondary menu left	19:96
Menu right	19:86	Secondary menu right	19:97
Return	19:83		
Enter	19:87		
Red	19:72	Record	19:55
Green	19:73	Band	19:14
Yellow	19:74	Angle	19:58
Blue	19:75	OSD	19:51

Previous	19:33	Previous page	19:68
Play	19:53	Audio	19:35
Next	19:32	Next page	19:10
Pause	19:48	Phase	19:60
Repeat	19:29	A-B repeat	19:59
Off	19:12	Power	19:70
<<	19:50	Slow back/step tune	19:78
Stop	19:54	Open	19:45
>>	19:52	Slow forward/tune	19:77
Subtitle (on/off)	19:40	Subtitle select	19:42
Store	19:46	Fn. Store	19:41
Volume up	19:16	Fn. Volume up	19:102
Clear	19:49	Fn. Clear	19:47
Volume down	19:17	Fn. Volume down	19:103
DSP	19:93	Fn. DSP	19:64
Display	19:122	Fn. Display	19:11
Mute	19:13	Fn. Mute	19:91