

Meridian Multiroom Network

MERIDIAN 212 REMOTE SENSOR Fitting Instructions

1. Introduction

The 212 Remote sensor is used to collect commands in infrared light from a 209 System Handset. It has no operational controls and is powered from the product to which it is connected. Since it receives a light beam it should be sited such that a seated listener can easily direct the handset towards it. It should not be positioned in direct sunlight since this can effect its sensitivity. Only one sensor is permitted in each listening area. The Sensor can be placed on a horizontal surface with the cable exit to the rear or permanently wall mounted using the bracket provided. Full instructions for connecting this product are provided in the MERIDIAN MULTIROOM INSTALLATION MANUAL.

2. Parts list

*MERIDIAN 212 Sensor with 3m of cable attached.
Wall Bracket. (fitted into the slide lugs in the back of the sensor)
Wall Fixing kit of screws and wallplugs.
Instruction sheet.*


*Boothroyd Stuart Ltd
13 Clifton Road
Huntingdon
Cambs PE18 7EJ
England*

0480 52144

Meridian Multiroom Network

**MERIDIAN 212 REMOTE SENSOR
Fitting Instructions**

3. Installation Diagram

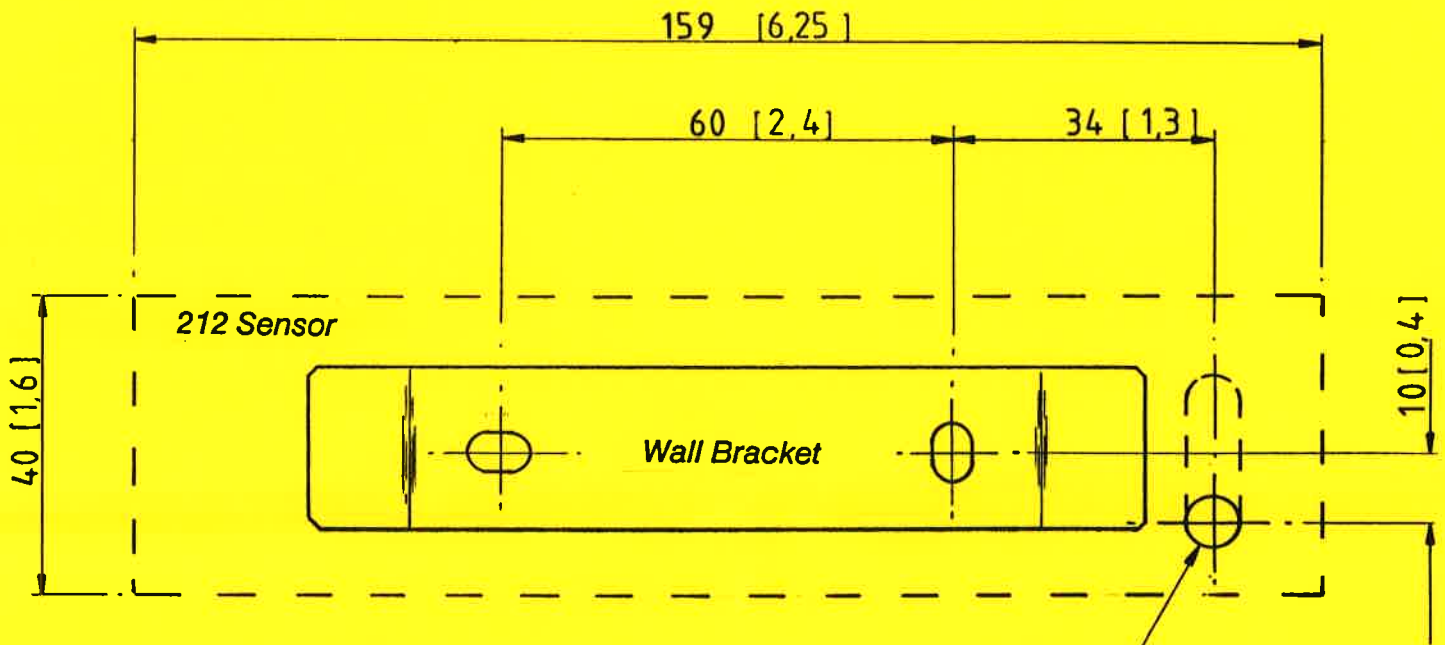

Template to show correct position of cable exit.

*Boothroyd Stuart Ltd
13 Clifton Road
Huntingdon
Cambs PE18 7EJ
England*

0480 52144