



Meridian Audio Limited
Latham Road, Huntingdon
Cambridgeshire PE29 6YE
United Kingdom


T +44(0)1480 445678
F +44(0)1480 445686
E info@meridian.co.uk
www.meridian-audio.com

Technical Note TN38

18th July 2011

DSP3200 - Mains fuse location

The fuse is located in a holder mounted in the connection-panel on the underside of the speaker. Use a small coin turned anti-clockwise to release the fuse.

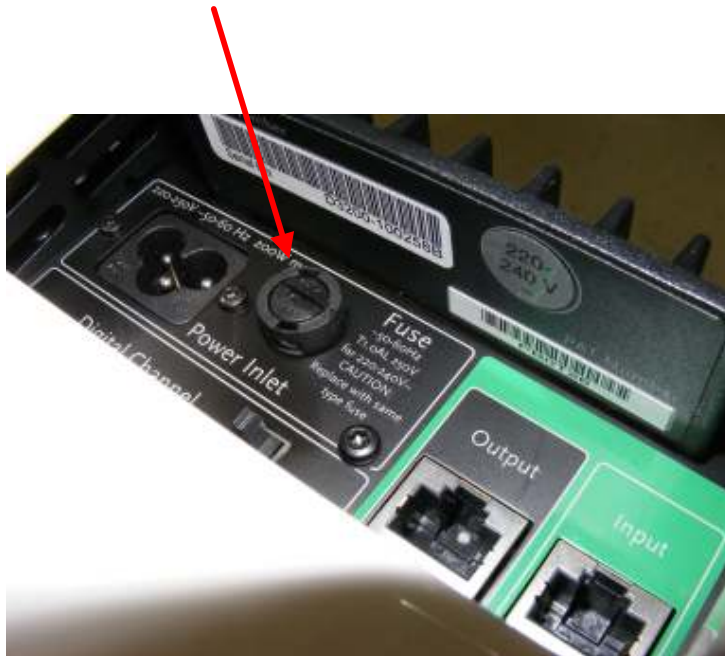

The fuse fitted depends on the operating voltage of the speaker. Meridian part numbers and descriptions are as follows:

Voltage	Part Number	Description
110-115V	G20268	FUSE T2A 20mm SAND FILLED CER
220-240V	G20266	FUSE T1A 20x5 SCHURTA 034-3117